

Slide Gates Control Discharge of Bulk Materials from Hoppers, Bins, Silos or Conveyors

Calculating Pneumatic Actuator Air Consumption

Question

We are designing a system that includes several pneumatic slide gates. My slide gates fit a 12-inch screw conveyor. I have 70-psi plant pressure and want each gate to open and close in 2 seconds. What is the air usage in SCFM for pneumatic actuators?

Answer

All machines need some form of energy to complete their tasks. In this case, pneumatic actuators use the pressure of air to perform work. There are several different types of pneumatic actuators, but the most commonly employed for slide gates utilize a single piston rod.

The air demand (SCFM) (standard cubic feet per minute) is used to represent the amount of air required to operate your pneumatic actuator.

A few variables are needed to calculate our SCFM value: Piston area (in²) or πr^2 with r being radius of cylinder bore, stroke length (in), compression ratio (Table 1), and stroke time or the amount of time for cylinder to fully open or close (sec).

$$\text{Air Demand (SCFM)} = \frac{60 \times \text{piston area (in}^2\text{)} \times \text{piston speed (} \frac{\text{in}}{\text{sec}} \text{)} \times \text{compression ratio}}{1728}$$

Inlet Pressure	Compression Ratio
10	1.7
v20	2.4
30	3.0
40	3.7
50	4.4
60	5.1
70	5.8
80	6.4
90	7.1
100	7.8
110	8.5
120	9.2
130	9.8
140	10.5

Table 1

KWS standard 12-inch flat pneumatic slide gates are equipped with a 2-inch diameter bore x 14-inch stroke pneumatic cylinder. Using Table 1 insert your variables in the air demand (SCFM) equation.

$$\text{Piston Area (in}^2\text{)} = \pi r^2 = 3.14 \times 1^2 = 3.14 \text{ in}^2$$

$$\text{Piston Speed (} \frac{\text{in}}{\text{sec}} \text{)} = \frac{14(\text{in})}{2(\text{sec})} = 7 \frac{\text{in}}{\text{sec}}$$

Compression Ratio = 5.8 (from Table 1 above for 70-psi inlet pressure)

Now, plug this information into the equation below -

$$\text{Air Demand (SCFM)} = \frac{60 \times \text{piston area (in}^2\text{)} \times \text{piston speed (} \frac{\text{in}}{\text{sec}} \text{)} \times \text{compression ratio}}{1728}$$

$$\text{Air Demand (SCFM)} = \frac{60 \times 3.14 \times 7 \times 5.8}{1728} = 4.43 \text{ SCFM}$$



KWS Manufacturing

3041 Conveyor Drive
Burlleson, Texas 76028

Toll Free: (800) 543-6558


Phone: (817) 295-2247

Fax: (817) 447-8528

www.kwsmfg.com




Ask the Experts

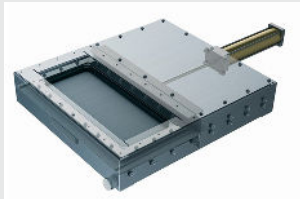

Slide Gates Control Discharge of Bulk Materials from Hoppers, Bins, Silos or Conveyors

Calculating Pneumatic Actuator Air Consumption

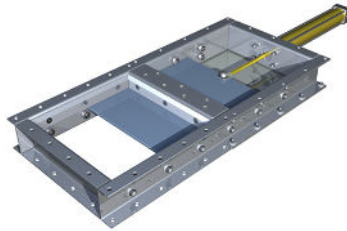

Pneumatic Actuators Use Air Pressure to Open and Close Gates



Bulk Materials are Diverted to One Side of the Other to Feed Multiple Processes



Air Demand is Easily Calculated Based on Piston Area, Piston Speed, and Compression Ratio



KWS Manufacturing

3041 Conveyor Drive
Burleson, Texas 76028

Toll Free: (800) 543-6558
Phone: (817) 295-2247
Fax: (817) 447-8528

www.kwsmfg.com